

Mychem air purifier Product instructions


Please read the instructions carefully before use




! Attention! Before commissioning

Removing the filter packaging

1. Turn the air purifier upside down and open the lids on the base by turning them anticlockwise.
2. Take out the filter.
3. Remove the plastic cover.

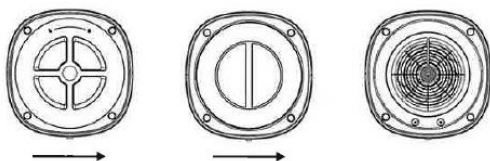

4. Insert the filter back into the appliance.
5. Close the lid by turning it clockwise.
6. The device is ready for commissioning.

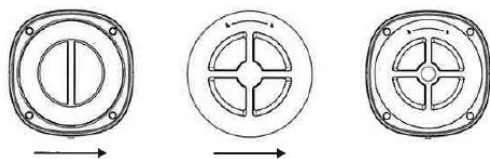

The symbol on the product or its packaging indicates that this product must not be treated as household waste. Instead, it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring that this product is disposed of correctly, you will help to prevent possible negative consequences for the environment and human health.


For more detailed information on recycling this product, please contact your local authority or household waste disposal service.

The device may only be used with the power supply unit supplied with the device.


Performance indices

Product name	Mychem air purifier sterilizer
Nominal voltage	220V-240V~
Nominal frequency	50Hz/60Hz
Use of the product	Removal of airborne particles, gaseous pollutants, microorganisms and other pollutants
Cleaning method	Anti-Virus Hepa and Carbon
Rated power	50W
Dust particles CADR	520m ³ /h
Energy Efficiency Index	High efficiency (particulate)
Noise (maximum)	63dB(A)
Applicable room area	to 65 m ²
Size of the device	300x300x587mm
Weight	5.8kg


Product structure

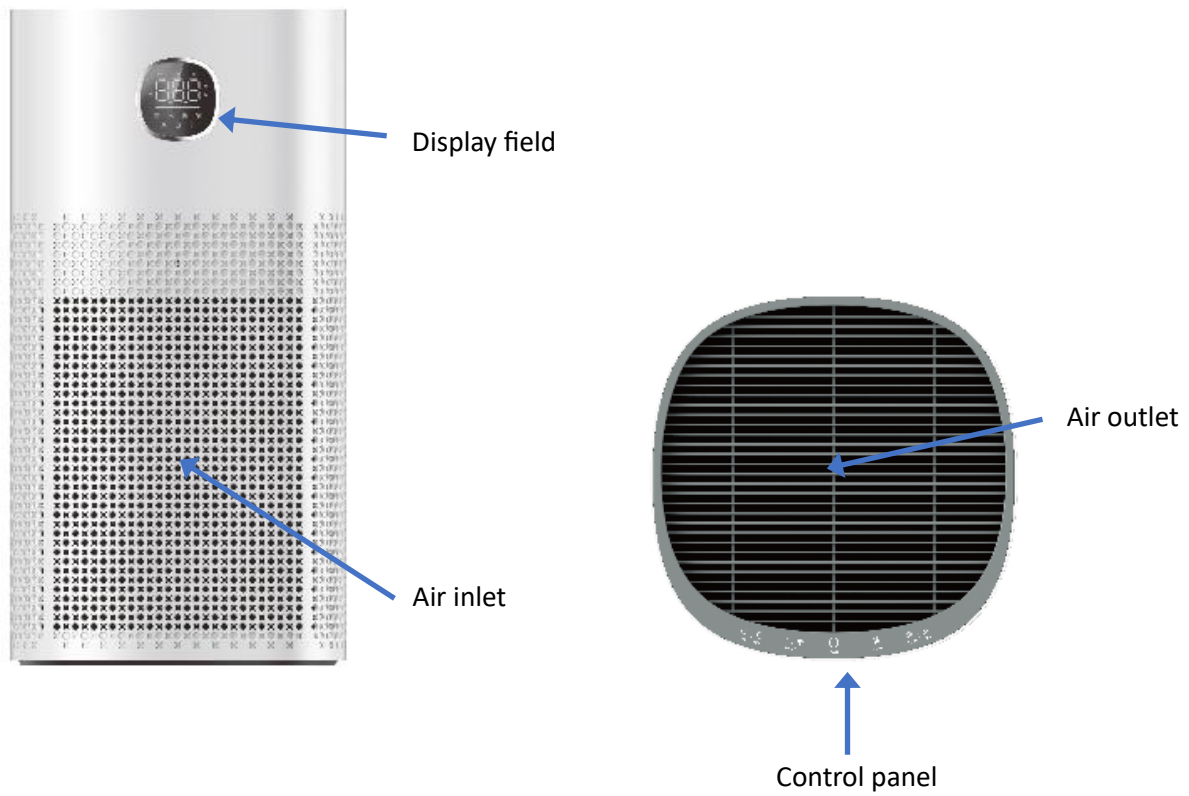

Control panel

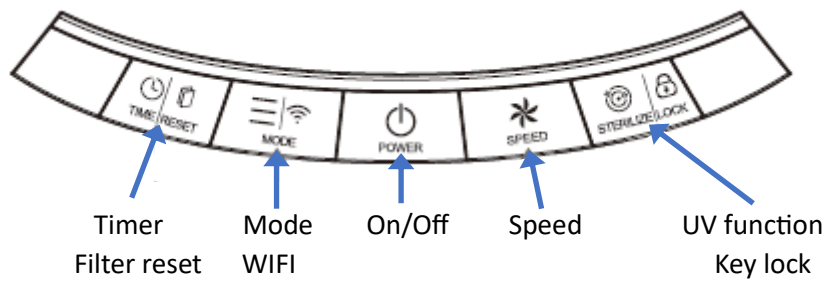


Display field

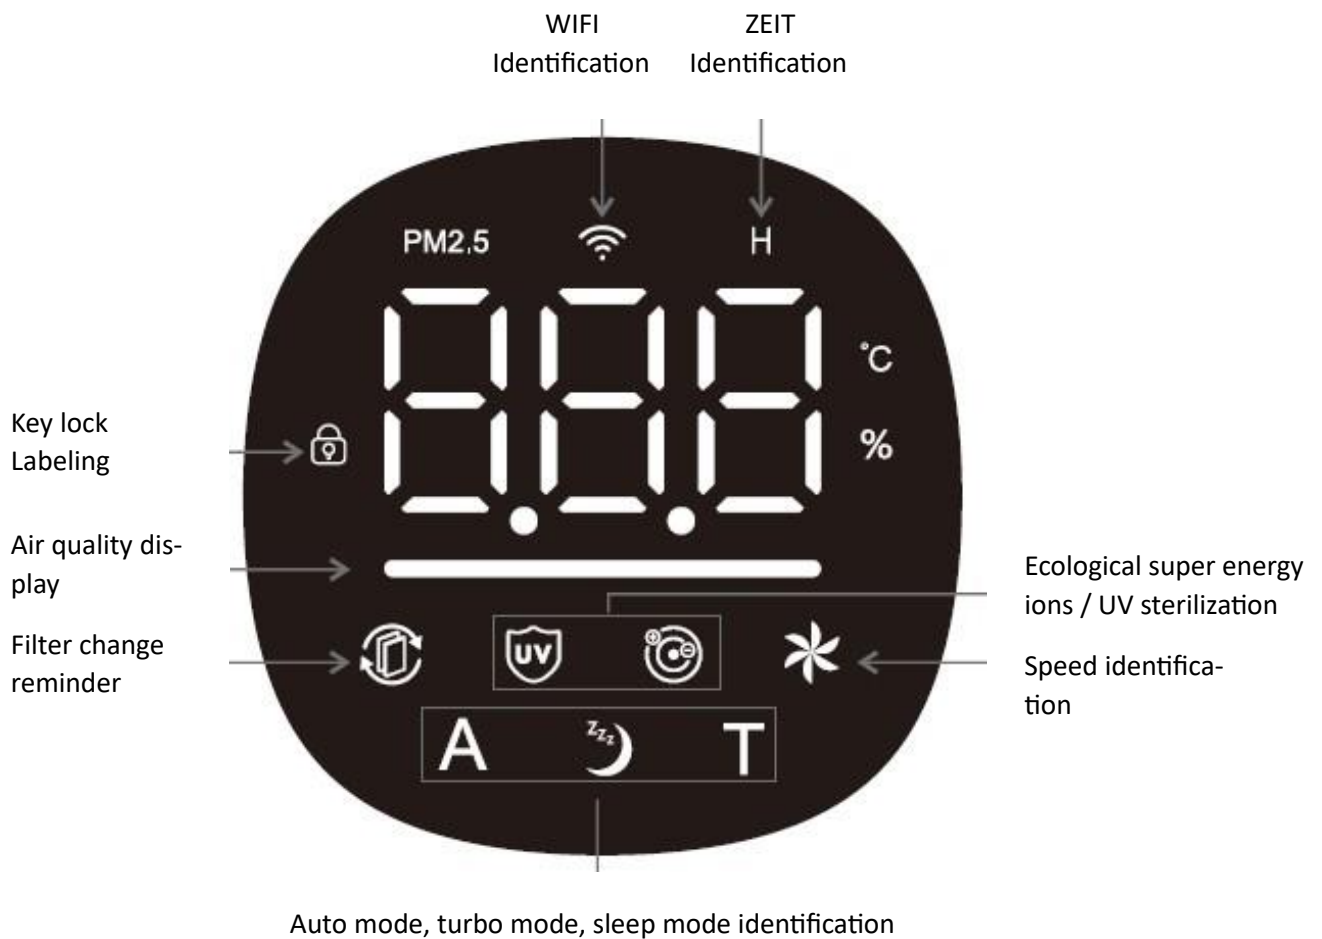 

Installation instructions


Remove the filter screen

 1. Turn the bottom cover counterclockwise
2. Pull out the filter screen

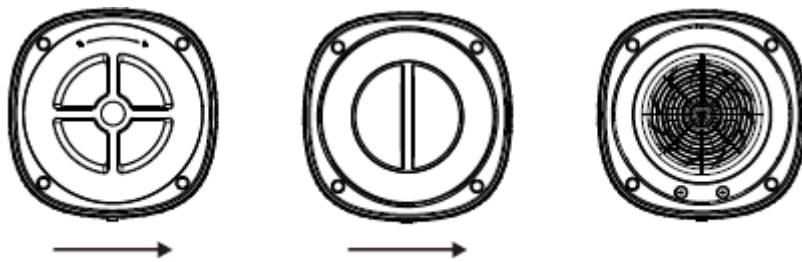

Installing the filter screen

1. Remove the filter screen from the plastic bag
2. Insert the filter screen into the base of the appliance
3. Turn the bottom cover clockwise and pull it tight

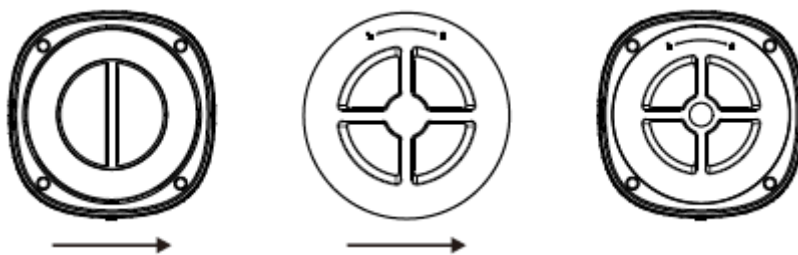

Operating instructions

TURN ON: When the device is switched on, the buzzer sounds and the device switches to standby mode.



POWER: Press the power button to start the device. Switch to automatic operating mode. Switch on the negative ion function and the appliance will operate in second gear.



SPEED: Press the button for the fan speed. The display shows 1, 2, 3, 4, 5 (cycle), the operating status of the machine. Select the ventilation speed.



MODE: Press this button briefly to switch between auto, turbo and sleep mode.



WIFI: In standby mode, press the "MODE" button for 5 seconds and the WIFI symbol flashes. When the device is in Internet connection mode, the WIFI symbol lights up.






TIME: Touch the timer to display a cycle of 0-8 hours. After switching on the timer function, the "H" symbol lights up.
After switching on the timer function, press and hold the timer button for two seconds to deactivate the timer, or touch the timer button and the number "0" will appear to deactivate the timer.
When the filter icon prompts to replace, long press this button to cancel the timing function first. And press it a second time to reset the filter screen prompt function.
If there is no timing function, long press this button to reset the filter element replacement prompt



RESET: When the appliance has reached 1,500 hours, the button icon will slowly flash white and prompt the user to replace the filter screen. Press the reset button for 3 seconds and reset the replacement prompt.




STERILIZE: Briefly press this button to switch the UV and eco super energy ions function on/off. When the function is switched on, the "  " and "  " symbols are highlighted. The symbols do not light up  when the function is switched.



CASTLE: Press this button for 3 seconds to activate the childproofing function. Once the childproof lock function has been activated, the buttons on the appliance can no longer be operated. Press this button for 3 seconds to release the lock again.

Maintenance and repair of filter screens



1Anti-Virus Hepa and Carbon (approximately once every two months) The button symbol flashes white slowly every 1,500 hours after the machine is switched on and prompts the user to change the filter. Press the reset button "  " for 3 seconds to reset the request for replacement.

The reset symbol flashes slowly after 500 hours and changes to a long glow if the reset does not take place.

There is no prompt in sleep mode. This is displayed after sleep mode ends.

Reset is the prompt function for replacing the filter. This is not the current accumulated time.

After resetting, the time is added up and the machine prompts you to replace the filter again after the next 1,500 hours.

- Place the filter screen in a well-ventilated area so that harmful gases and bacteria on the surface of the filter screen can evaporate. Do not expose it to excessive sunlight.
- Do not wash the filter screen with water.

✂ Tips

- The mains plug must be disconnected before cleaning and maintenance.
- Do not operate the appliance if the filter screen has been removed. The machine will not be able to remove dust and the suction of dust may cause the appliance to fail.
- If the appliance is not used for a longer period of time, please unplug it from the mains (the appliance also consumes power in standby mode)

If the appliance is not used for a longer period of time, please unplug it from the mains (the appliance also consumes power in standby mode).


- When replacing the filter screen, please switch off the power supply first.

Precautionary measures

◆ Installation instructions

1. Do not set up the device in the following locations:


- Direct sunlight or opposite the air outlet and in heated locations heated locations (can lead to deformation, deterioration, discoloration and failure of the appliance).
- Accessories such as televisions and radios (can cause image distortion and noise). Please place the device at a distance of at least 1 m from them. If the same power socket is used with these devices, picture distortion and noise may occur when plugging in the mains plug. In this case, connect the mains cable to a different socket outlet.

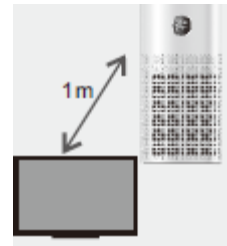

2. As pollen, dust etc. are likely to accumulate near the floor, it is recommended to place the appliance on a flat floor in the room.

3. Optimum air circulation

To avoid blocking the air inlet and outlet, position the appliance about 30 cm or more away from the left and right sides of the wall, furniture, curtains, etc. To use this product more effectively, please keep the back of the appliance at least 20 cm away from the wall.

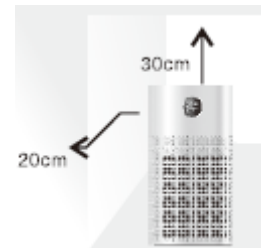

4. Do not place any objects on the main unit

otherwise the appliance may malfunction. Special note: Do not place any magnets magnets and metal objects on the appliance.




5. Do not block the air inlet and the air outlet, e.g.

do not place any objects on the air outlet or in front of the air inlet.

Forbidden

1. It is forbidden to move or shake the machine while it is running.
Do not pull on the power cable when moving or storing the appliance. Pulling on the power cable can cause a short circuit or damage to the power cable, which in turn can lead to a fire or electric shock.
2. Do not damage the mains cable or plug and do not cut, twist or pull on it. If the mains cable is damaged, it must be replaced by the manufacturer, customer service or a specialist in order to avoid danger. As an amateur, it is forbidden to replace the cable and dismantle the appliance to avoid the risk of electric shock.
3. The plug and your hand should not come into contact with water before plugging in the mains plug, otherwise there is a risk of electric shock.
4. Do not use power adapters, universal sockets or connected devices that exceed the rated 220V ~ 5A AC current. Using a universal socket that exceeds the rated value may overheat the power cord and cause a fire.
5. Do not touch the mains plug with wet hands, as this can lead to an electric shock.
6. Do not insert your fingers or metal objects into the gap of the air outlet, as this may result in electric shock or injury. Avoid getting water, flammable cleaning agents or other liquids into the product to prevent electric shock or fire.
7. This product is not a replacement for normal ventilation systems, vacuum cleaners and extractor hoods that are used daily in the kitchen.
8. Do not use this product in the immediate vicinity of gas appliances, heaters or stove accessories.
9. Do not use this product in a damp or hot environment such as a bathroom, toilet or kitchen.
10. Never place the product in the following locations
 - Unstable locations (otherwise the product may fall or topple over, resulting in injury, electric leakage, electric shock or fire).
 - Places that are hot, damp or wet, such as bathrooms. This can otherwise lead to an electric shock or fire. In addition, you should not set up the air purifier in a place where there is soot.
11. Do not use the air purifier in indoor areas that you have treated with smoke-based insecticides.

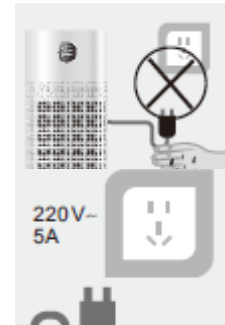

- Chemical residues can accumulate in the appliance and then be released from the air outlet and endanger your health.


- After using the insecticide, ventilate the room thoroughly before using the air purifier.

12. It is not recommended to use the air purifier if you burn incense sticks or similar, these odors are very intense, otherwise the filter of the air purifier can emit this odor.



Mandatory

1. Switch off the appliance immediately if one of the following situations occurs, otherwise an electric shock, sparks or smoke may occur.
 - Unusual noises or vibrations can be heard during operation.
 - The appliance is unusually hot and has a burnt smell.
2. Please clean the mains plug regularly.
 - If the mains plug is dusty, moisture can damage the insulated part of the plug, which can lead to a fire.
 - If the appliance is not to be used for a long period of time, please unplug the mains plug.
3. Be sure to disconnect the mains plug before carrying out maintenance work on the appliance.
 - The appliance may start up suddenly and cause an electric shock or injury.
4. Insert the plug firmly into the socket (if the plug is not inserted firmly, an electric shock due to overheating or even a fire may occur).
 - Do not use a damaged plug or a loose socket.
5. Pull the mains plug out of the insulated part of the hand plug.
 - Do not pull on the mains cable to pull the mains plug, this can cause damage to the mains cable, electric shock, short circuit or fire.
6. If one of the following situations occurs, switch off the appliance immediately and contact the maintenance service.
 - The switch does not work
 - The power cord or plug is abnormally hot
 - You notice an abnormal noise or vibration
 - There are other abnormalities or malfunctions
7. Disassembly of the machine by non-professionals is prohibited to avoid the risk of electric shock.risk of electric shock.

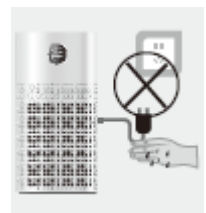

For IEC (International Electrotechnical Commission):

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

For DE:

This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities.

Persons with reduced physical, sensory or mental capabilities or lack of experience and or lack of experience and knowledge if they are supervised or instructed in the safe use of the appliance and understand the hazards involved. Children must not play with the appliance. Cleaning and maintenance by the user must not be carried out by children without supervision.

The user manual can also be viewed and downloaded from our website:

The symbol on the product or on the packaging indicates that this product must not be

must not be disposed of with household waste. Instead, it should be taken to a collection point for the recycling of electrical and electronic equipment. By ensuring



that this product is disposed of correctly, you will help to prevent possible negative consequences for the environment and human health caused by improper disposal of this product. Consequences for the environment and human health that could be caused by improper disposal of this product.

For more detailed information about recycling of this product, please contact your local authority or household waste disposal service.

Troubleshooting

◆ Error code Description and troubleshooting

Disturbance phenomena	Inspektion/Lösung
Cannot switch on or button does not respond	1. is the mains cable plug inserted? → Insert the power cable plug. 2. is the filter screen of the air purifier installed? → Insert the filter screen.
The smell of the air outlet feels unpleasant	1. is the filter screen dirty? → Clean the filter screen. 2. has the filter screen not been replaced for a long time? Has it not been replaced for a long time? → Replace the filter screen with a new one.
Filter screen alarm is on	The alarm light for the filter screen lights up: It indicates that the time for replacing the filter screen has reached the set value. At this point, replace the filter screen and reset it.

◆ Packaging details

Body	1piece
Antivirus Hepa and carbon	1Set
Product manual	1piece
Remote control	1piece

WIFI control function

◆ User workflow

1. Devices provided by the user: a smartphone and a wireless router.
2. Smartphone: Supports IOS or Android systems. The IOS version does not support jailbreak, supports IOS8 and higher. Android version supports V6.0 and higher.
3. Wireless router: Do not use public WIFI.
4. Download the APP software and install it on your cell phone. Please refer to the instructions for the WIFI function in detail for the configuration method
5. Make sure that the WLAN router is switched on and can access the Internet.

◆ Precautionary measures:

- 1When using the APP to connect the air purifier, select the purchased product model to connect.
2. The WLAN router must operate in the 2.4 GHz band.

Instructions for using the WIFI function

Scan the QR code to download the app

- ① Scan to download Smart Life APP
- ② After registration, log in to the APP (applicable on Android or IOS system)



Download APP◆APP registration and login method

After you have downloaded and installed the "Smart Life" APP on your cell phone, open the "Smart Life" APP and select "My" to log in/register.

Users who have forgotten their password can reset it via "Forgot password" on the user interface.

1. Press the "MODE" button for 5 seconds in standby mode and the WIFI symbol flashes.
2. Switch the page to "Home Page", click "+" in the upper right corner to select "Add Device", and the APP will display the device you are looking for nearby.
3. "Discover the device to add" is displayed on the APP, select it Click "Add" to select the WIFI hotspot connected to the cell phone and enter the password for the WIFI hotspot.
4. Wait for the configuration to be successful and click on "Finish".